

PART #: 500005

**DESC: IGNITION SWITCH
- IN DASH SWITCH**


© 1995 AAW Rev 4.0 5/19/00
Instruction sheet 92964497

American Autowire Systems

American Autowire makes it easy

**FACTORY
automotive
wiring FIT**

150 Heller Pl#17 W
Bellmawr, NJ 08031
856-933-0801

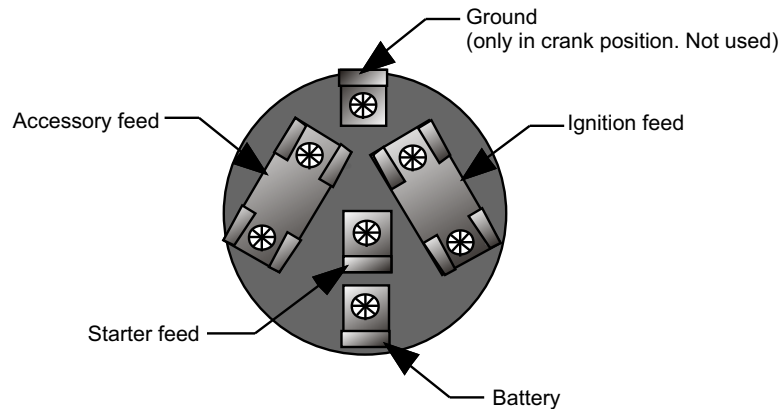

Connect the Ignition Switch wires as shown above.

1. The BAT terminal is connected to a 12 volt battery connection.
2. The SOL terminal is connected to your neutral safety switch then to your starter.
3. The IGN terminal is connected to your fuse block ignition connection and to your ignition systems (coil).
4. The ACC terminal is connected to your fuse block accessory connection

PART #: 500005

**DESC: IGNITION SWITCH
- IN DASH SWITCH**


© 1995 AAW Rev 4.0 5/19/00
Instruction sheet 92964497

American Autowire Systems

American Autowire makes it easy

**FACTORY
automotive
wiring FIT**

150 Heller Pl#17 W
Bellmawr, NJ 08031
856-933-0801

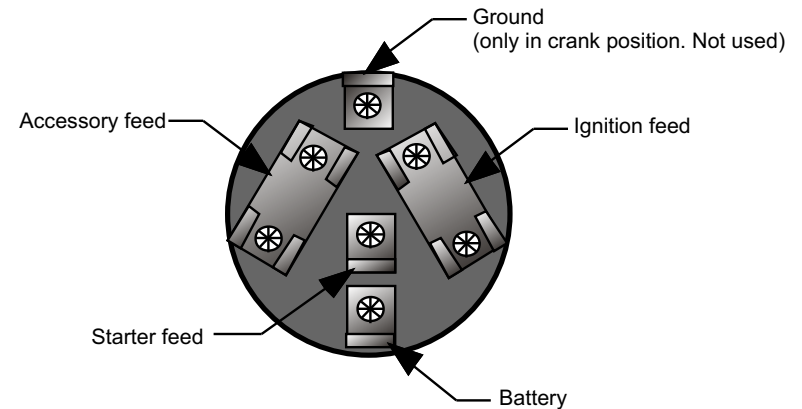

Connect the Ignition Switch wires as shown above.

1. The BAT terminal is connected to a 12 volt battery connection.
2. The SOL terminal is connected to your neutral safety switch then to your starter.
3. The IGN terminal is connected to your fuse block ignition connection and to your ignition systems (coil).
4. The ACC terminal is connected to your fuse block accessory connection