


## HEADLIGHT BUCKET GROMMETS

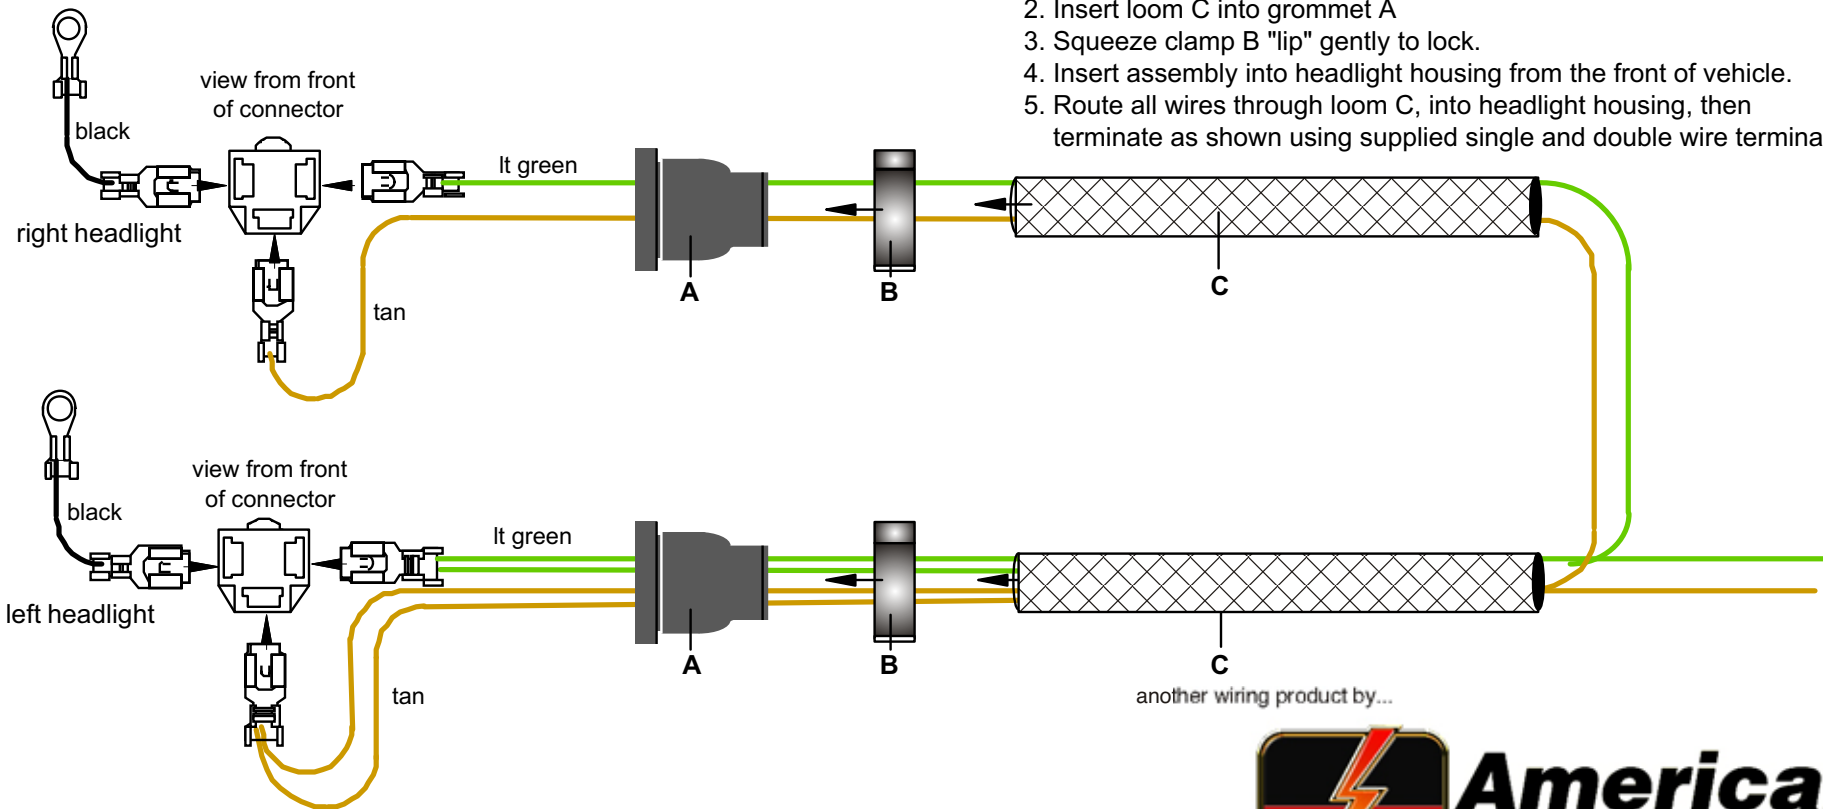

1. Push clamp B onto grommet A
2. Insert loom C into grommet A
3. Squeeze clamp B "lip" gently to lock.
4. Insert assembly into headlight housing from the front of vehicle.
5. Route all wires through loom C, into headlight housing, then terminate as shown using supplied single and double wire terminals.

another wiring product by...




**American  
Autowire**

We Make Wiring Easy!!

150 Heller Pl #17 W Bellmawr, NJ 08031 856-933-0801

## PARKING LAMP ASSEMBLY

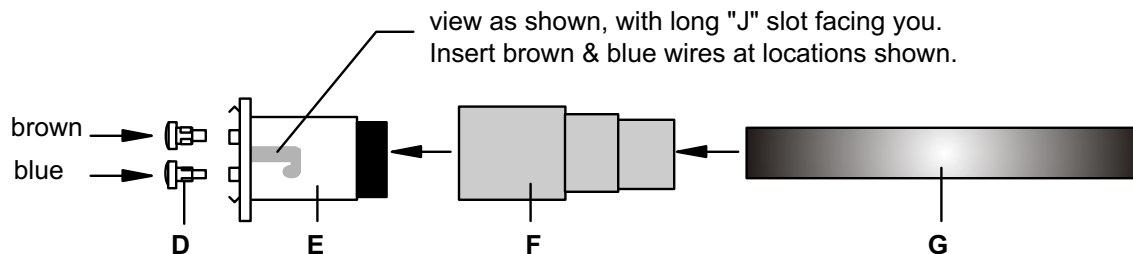

1. Insert rubber tube G into boot F.
2. Insert parking lamp wires into boot & tube.
3. Insert wires into lamp socket E holes.
4. Install rivets D on wires.
5. Push boot & tube assembly onto lamp socket.

PART #

**500416**

**K**

DESCRIPTION:

**PARKING LAMP AND  
HEADLIGHT GROMMET KIT**

**1955-56 Chevy**

92965035 instruction sheet Rev 3.0 6/2/2003