


Plug connectors into mating orange/white wires on the dash and rear body wiring, after harnesses have been installed.

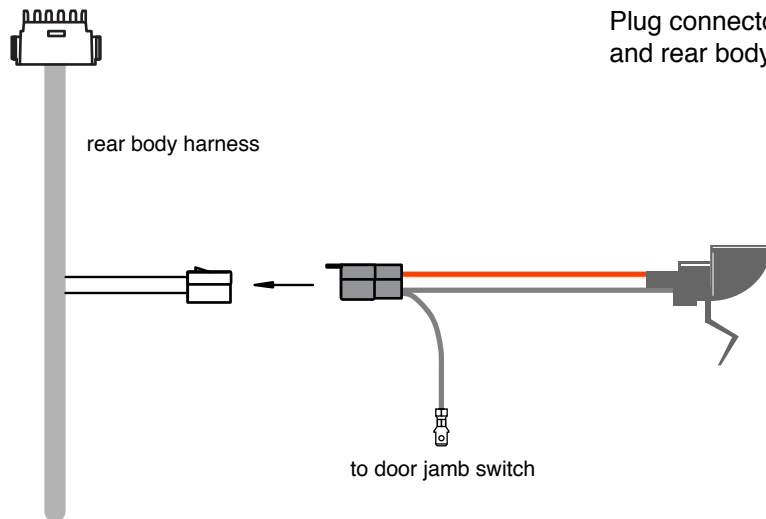

**NOTE:** Your new underdash courtesy lamp kit uses # 631 bulbs (not included with this kit). They may be purchased at any auto parts store.



**American  
Autowire**

www.americanautowire.com 856-933-0801

PART #

500471

N

DESCRIPTION:

Courtesy Lamp Kit

92965219

Rev 1.0

8/15/2013