


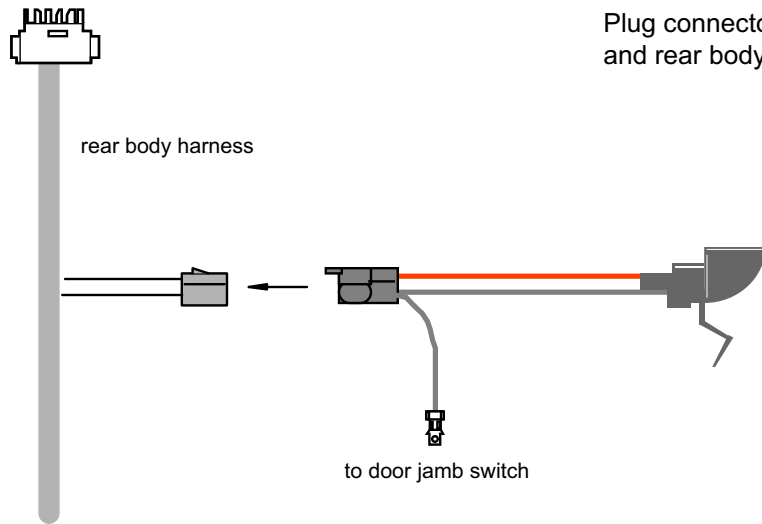

Plug connectors into mating orange/white wires on the dash and rear body wiring after harnesses have been installed.



**American Autowire Systems**  
*American Autowire makes it easy*

**FACTORY**  
 automotive  
 wiring **FIT**

150 Heller Pl #17 W  
 Bellmawr, NJ 08031  
 856-933-0801

PART #

**500471**

**N**

DESCRIPTION:

**Courtesy Lamp Kit**

92965219 instruction sheet    Rev 0.0 3/7/2001    SR