


courtesy lamp connector  
from dash harness (bag G)

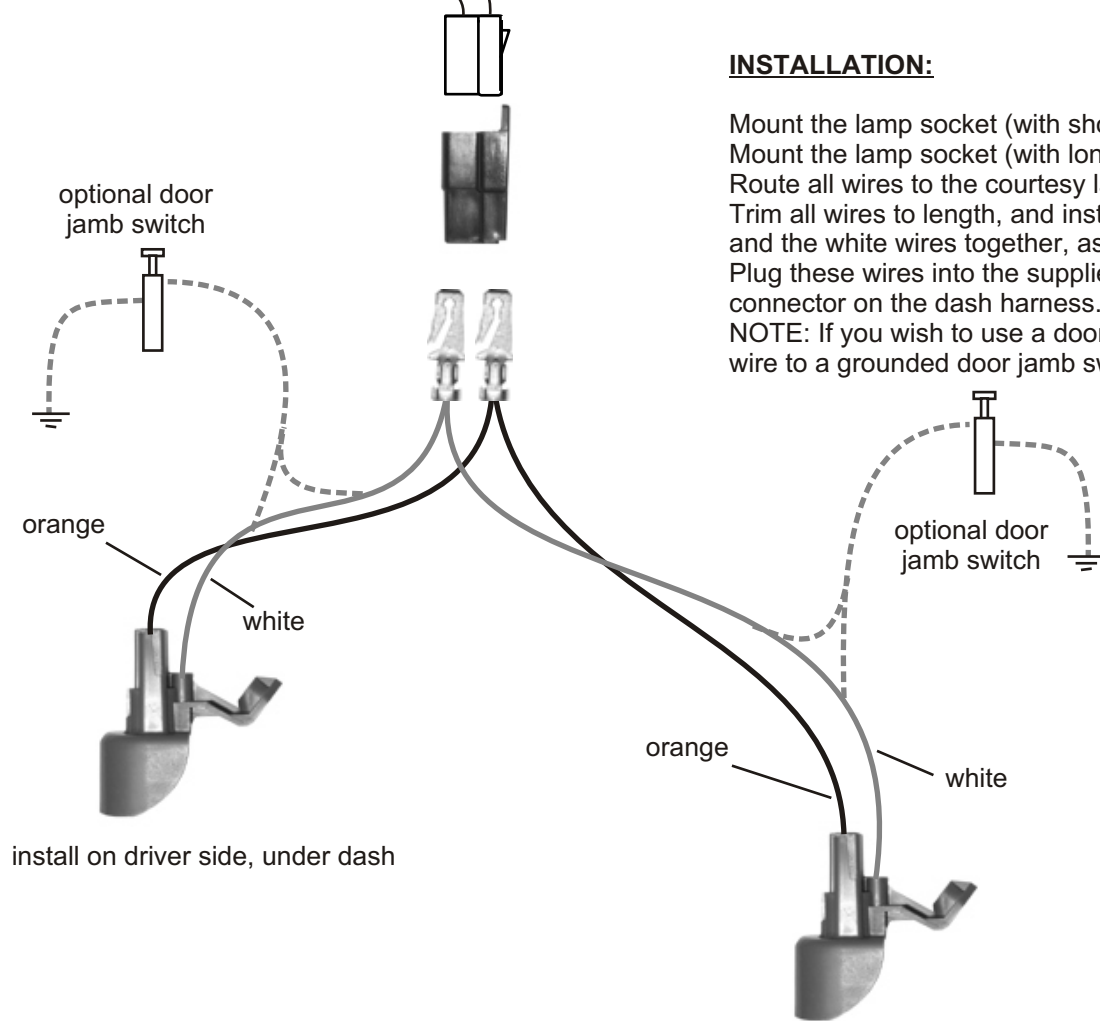

install on driver side, under dash

install on passenger side, under dash

**INSTALLATION:**

Mount the lamp socket (with shorter wires) under the dash, on the driver side.  
Mount the lamp socket (with longer wires) under the dash, on the passenger side.  
Route all wires to the courtesy lamp connector on the dash harness (orange and white wires).  
Trim all wires to length, and install the supplied male terminals, doubling the orange wires together, and the white wires together, as shown.  
Plug these wires into the supplied connector, maintaining color continuity with the mating connector on the dash harness.  
NOTE: If you wish to use a door jamb switch to activate courtesy lamps, simply connect the white wire to a grounded door jamb switch, as well as to the dash connector as shown.


another wiring product by...



**American  
Autowire**

We Make Wiring Easy!!

856-933-0801

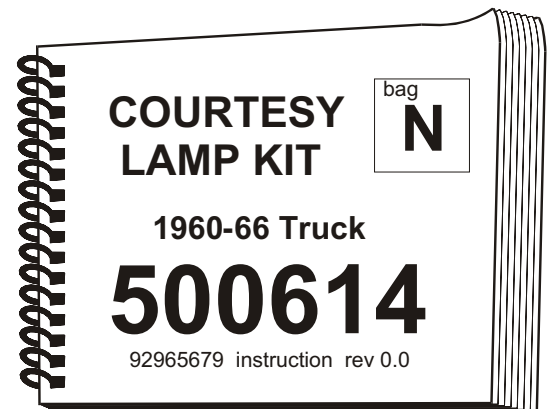

**COURTESY  
LAMP KIT**

bag  
**N**

1960-66 Truck

**500614**

92965679 instruction rev 0.0