


NOTE: View from back of connector.

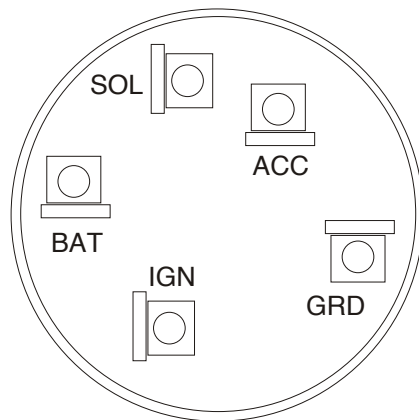


## INSTALLATION

NOTE: Some ignition switches came packaged with a copper lamp holder bracket. This bracket was removed before packaging. However, the instruction sheet related to the switch shows this bracket. This bracket is not used in this application and it's installation can be ignored.

1. Plug in connector D from the dash wiring harness (bag G).
2. Install the back-up nut C onto the switch. The depth of this nut will have to be determined when mounting the switch.
3. Insert the switch into the hole in the dash panel.
4. Install your original dash bezel plate.
5. Slide on collar B.
6. Screw on threaded collar A
7. Insert your existing lock cylinder into the new switch. This allows you to utilize your original keys

NOTE: American Autowire has correct lock cylinders available  
ORDER PART NUMBER 500672

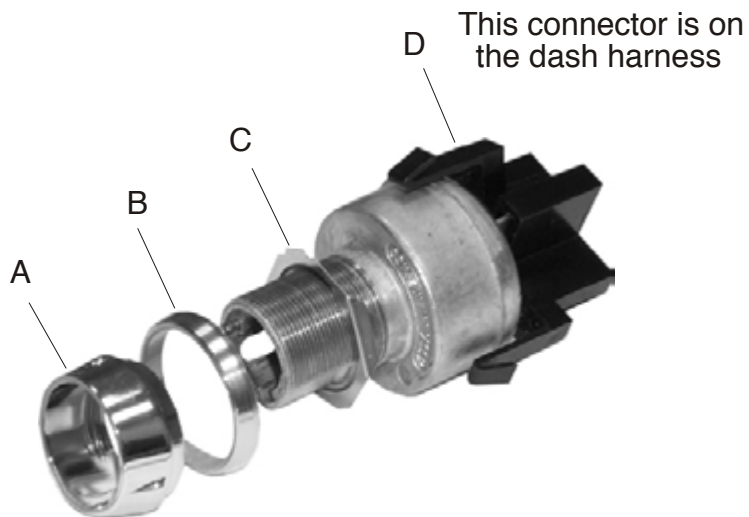

their wiring product by...



**American  
Autowire**

We Make Wiring Easy!!  
856-933-0801

**IGNITION SWITCH**

1955-56 Chevy

**500684**

92965941 instruction rev 1.0 7/19/10