

INSTALLATION OF POWER WIRE - ALL ALTERNATORS

1. Install rubber boot (A) on the red wire as shown below.
2. Connect the large red wire to the alternator "BAT" stud.
3. Route the other end of this wire to the MEGA-FUSE connector and cut to length. The MEGA-FUSE connector is meant to be installed in line (as shown in the diagram) between the main power source and the Highway 22 panel.
4. Connect the red wire to the supplied MEGA-FUSE connector using shrink tube "E" and terminal "B" as shown in the diagram. Be sure to install the shrink tube before final crimp and soldering of the ring terminal.

ONE WIRE ALTERNATOR

Installation of the alternator power wire is the only connection required for a ONE-WIRE alternator. This type of alternator has a self excited regulator which is activated by the rpm of the engine.

GM INTERNALLY REGULATED ALTERNATOR ("SI" SERIES)

- 5) Plug the white connector into the 2 male blades on alternator. (It will only plug in one way.)
- 6) Route and connect the small red wire through the insulating boot and on to the alternator stud. Slide the insulating boot over the battery stud connection.
- 7) Connect the brown wire to the "ACC" terminal of the ignition switch either directly or through the in line diode as follows:

Note 1: Depending on your alternator and ignition switch manufacturer, it may be necessary to use a DIODE in the alternator's regulator circuit to prohibit any alternator feedback after the motor is shut off. If so, install the diode "in series" as shown.

Note 2: When performing electrical testing on the vehicle during installation, disconnect the diode from the circuit to prevent any possible damage to the diode until the testing is complete.

- a. If diode installation is not needed for your alternator, connect the BROWN wire from the alternator directly to the ignition switch "ACC" terminal using supplied female terminal "C" and connector "D".
- b. If diode installation is needed for your alternator, connect the BROWN wire from the alternator to the in line diode as shown in the diagram and complete the connection to the ignition switch "ACC" terminal using supplied female terminal "C" and connector "D".

Note: Be sure to have the grey line (on diode) towards the alternator. This line indicates the "direction of flow" of electricity. Failure to have this line in the right direction will prevent current from flowing.

another wiring product by...


Note: American Autowire Systems also carries alternator adapter kits for GM "CS" series alternators.



**American
Autowire**

We Make Wiring Easy!!

150 Heller Pl #17 W Bellmawr, NJ 08031 856-933-0801

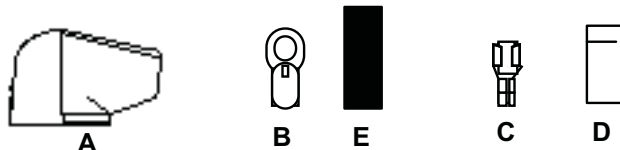

PART #

500699

B

DESCRIPTION:




**ALTERNATOR
CONNECTION KIT**

92966030 instruction sheet

Rev 2.0

4/15/2009

USE THIS SHEET FOR HIGHWAY 15 SERIES WIRING KIT

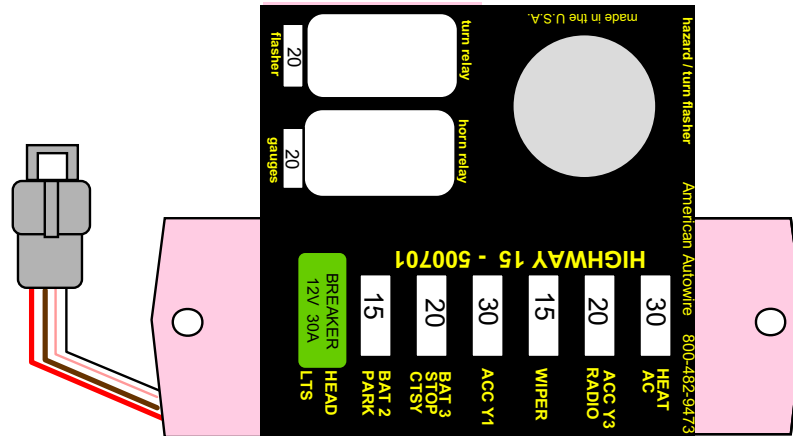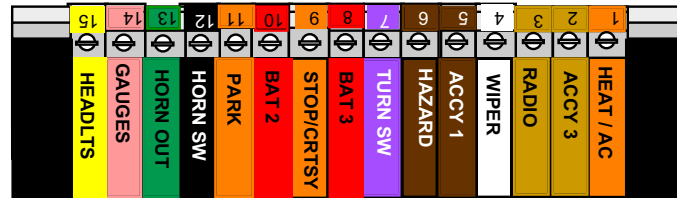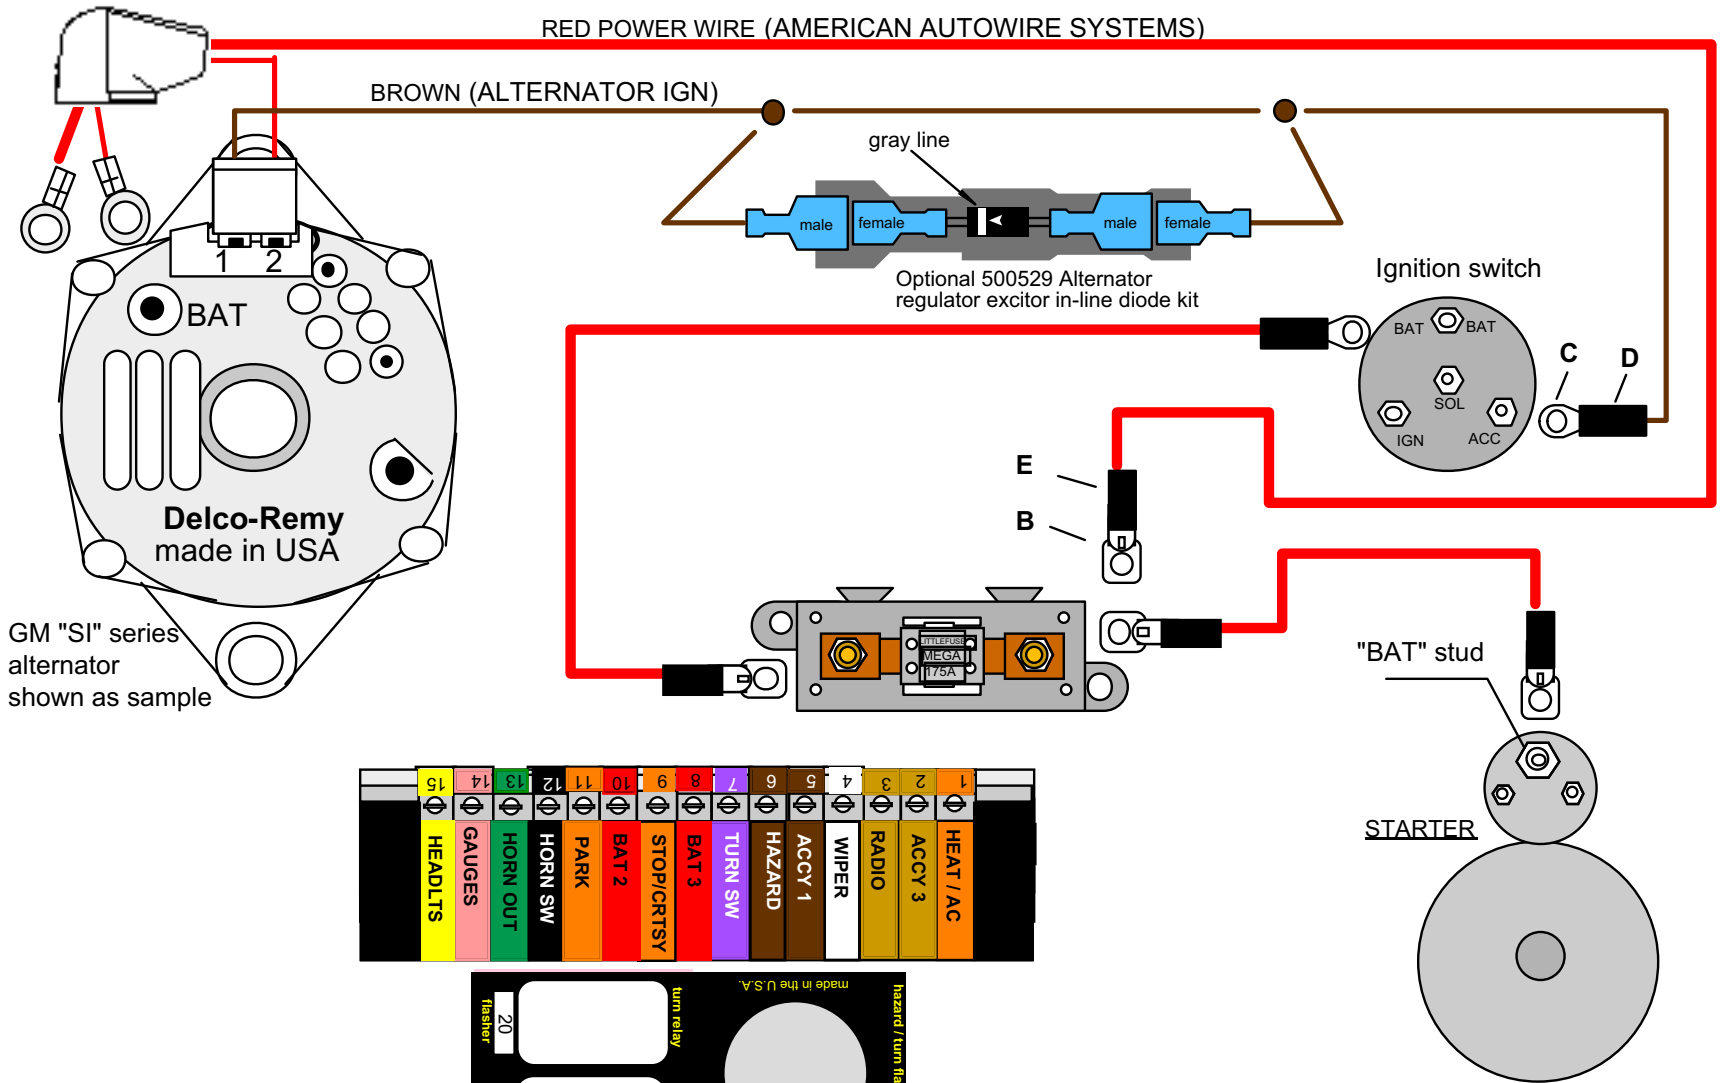

PART #

500699

DESCRIPTION:

ALTERNATOR CONNECTION KIT

92966030 instruction sheet Rev 2.0 4/15/2009

B

INSTALLATION OF POWER WIRE - ALL ALTERNATORS

1. Install rubber boot (A) on the red wire as shown below.
2. Connect the large red wire to the alternator "BAT" stud.
3. Route the other end of this wire to the MEGA-FUSE connector and cut to length. The MEGA-FUSE connector is meant to be installed in line (as shown in the diagram) between the main power source and the Highway 15 ignition switch and panel feed.
4. Connect the red wire to the supplied MEGA-FUSE connector using shrink tube "E" and terminal "B" as shown in the diagram. Be sure to install the shrink tube before final crimp and soldering of the ring terminal.

ONE WIRE ALTERNATOR

Installation of the alternator power wire is the only connection required for a ONE-WIRE alternator. This type of alternator has a self excited regulator which is activated by the rpm of the engine.

GM INTERNALLY REGULATED ALTERNATOR ("SI" SERIES)

- 5) Plug the white connector into the 2 male blades on alternator. (It will only plug in one way.)
- 6) Route and connect the small red wire through the insulating boot and on to the alternator stud. Slide the insulating boot over the battery stud connection
- 7) Connect the brown wire to the "ACC" terminal of the ignition switch either directly or through the in line diode as follows:

Note 1: Depending on your alternator and ignition switch manufacturer, it may be necessary to use a DIODE in the alternator's regulator circuit to prohibit any alternator feedback after the motor is shut off. If so, install the diode "in series" as shown.

Note 2: When performing electrical testing on the vehicle during installation, disconnect the diode from the circuit to prevent any possible damage to the diode until the testing is complete.

- a. If diode installation is not needed for your alternator, connect the BROWN wire from the alternator directly to the ignition switch "ACC" terminal using supplied female terminal "C" and connector "D".
- b. If diode installation is needed for your alternator, connect the BROWN wire from the alternator to the in line diode as shown in the diagram and complete the connection to the ignition switch "ACC" terminal using supplied ring terminal "C" and sleeve "D".

Note: Be sure to have the grey line (on diode) towards the alternator. This line indicates the "direction of flow" of electricity. Failure to have this line in the right direction will prevent current from flowing.

Note: American Autowire Systems also carries alternator adapter kits for GM "CS" series alternators.


another wiring product by...



**American
Autowire**

We Make Wiring Easy!!

150 Heller Pl #17 W Bellmawr, NJ 08031 856-933-0801

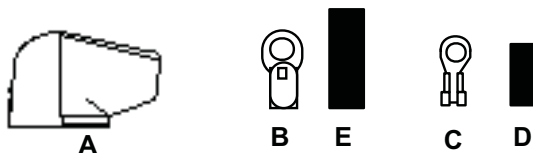

PART #

500699

B

DESCRIPTION:

**ALTERNATOR
CONNECTION KIT**

92966030 instruction sheet

Rev 2.0

4/15/2009