


Plug connectors to mating orange/white wires on the dash and rear body wiring, after harnesses have been installed.

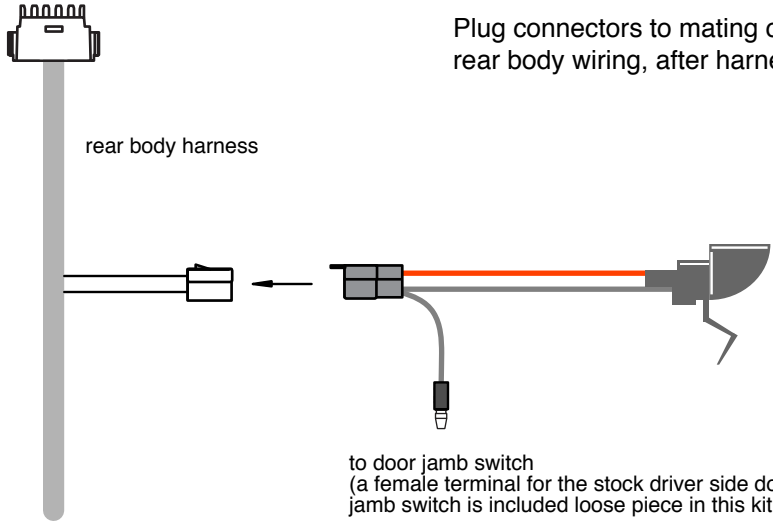

**American  
Autowire**

www.americanautowire.com 856-933-0801

**NOTE:** Your new underdash courtesy lamp kit uses # 631 bulbs (not included with this kit). They may be purchased at any auto parts store.

|              |                          |           |
|--------------|--------------------------|-----------|
| PART #       | <b>500708</b>            | <b>N</b>  |
| DESCRIPTION: | <b>Courtesy Lamp Kit</b> |           |
| 92966085     | Rev 1.0                  | 8/16/2013 |