


All Copper Ground System

No Frame Rail

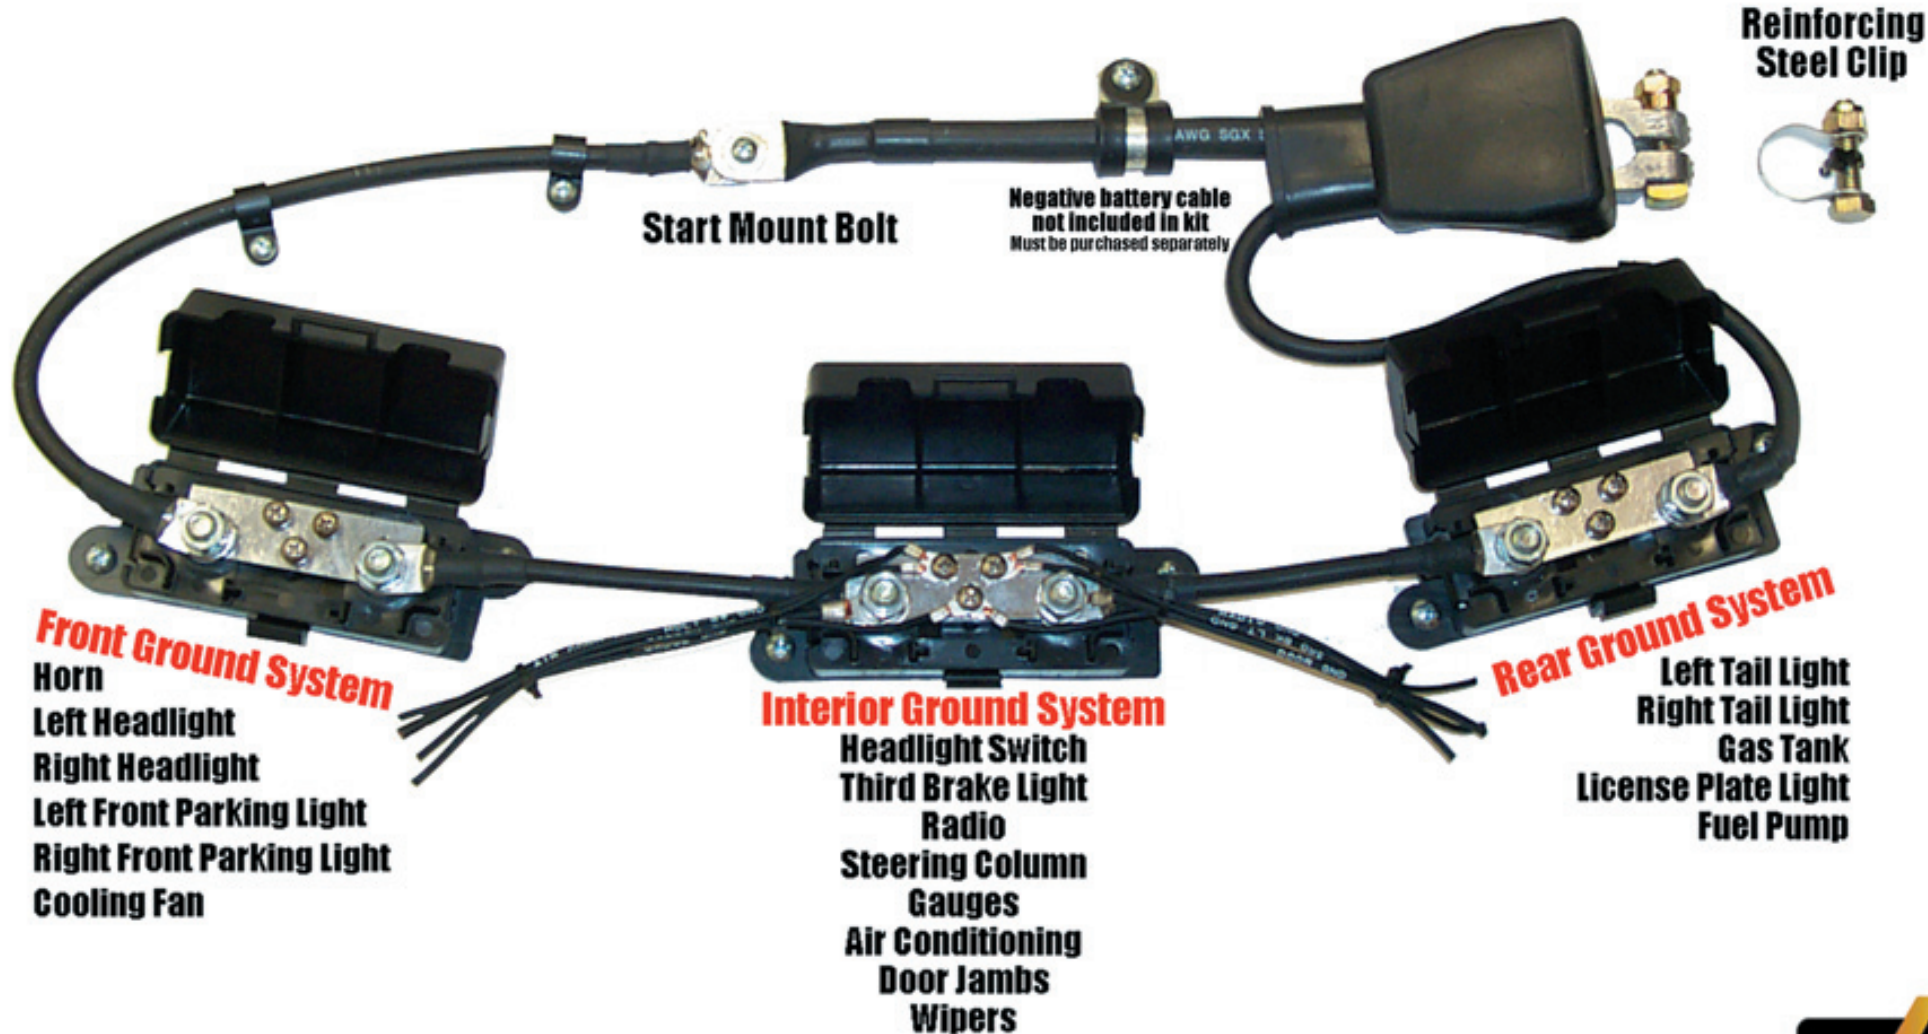

Start Mount Bolt

Negative battery cable
not included in kit
Must be purchased separately

Reinforcing
Steel Clip

Front Ground System

Horn
Left Headlight
Right Headlight
Left Front Parking Light
Right Front Parking Light
Cooling Fan

Interior Ground System

Headlight Switch
Third Brake Light
Radio
Steering Column
Gauges
Air Conditioning
Door Jamba
Wipers

Rear Ground System

Left Tail Light
Right Tail Light
Gas Tank
License Plate Light
Fuel Pump

Grounding Kit 500717

150 Heller Place
#17 West
Bellmawr
New Jersey 08031
(856) 933-0801
(856) 933-0805




92966189

FOLLOW THE GUIDELINES BELOW FOR PROPER USE OF THIS TOOL. DO NOT APPLY SOLDER TO THE TERMINAL UNTIL IT IS CRIMPED TO THE CABLE !




STEP 1: Select the proper gauge location which matches your cable. Orient the terminal, as shown above.

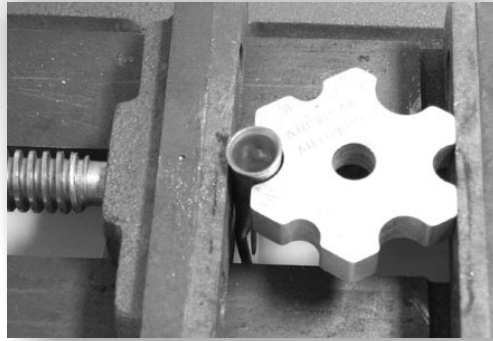


STEP 2: Set the crimp tool in a vise, as shown, with the terminal set into position.



STEP 3: Strip the cable to 5/8", and apply rosin solder flux. A protective sleeve (shrink tube) should be slid onto the cable

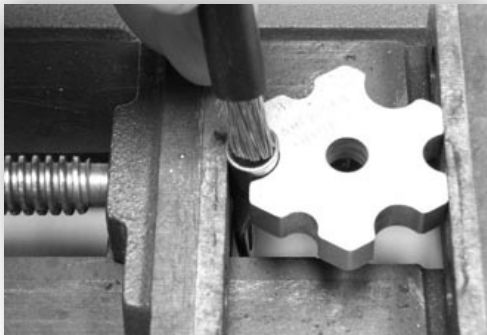

STEP 4: Insert the cable into the terminal hole.

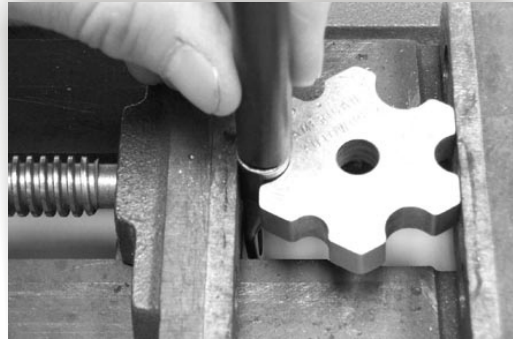

STEP 5: Seat the cable as far into the terminal as it will allow. Tighten the vise as far as you can, to apply proper crimp on the terminal.



STEP 6: Remove the terminal from the vise and heat the crimp area of the terminal with a proper torch. Apply rosin core solder through the solder hole, as shown.

STEP 7: Rinse soldered area with water.

**American
Autowire
actory
it[®]**
automotive
wiring

We Make Wiring Easy!!

856-933-0801

**BATTERY CABLE
CRIMP TOOL
500665**
92966040 instruction rev 0.0