


Plug this tan wire lead onto your stock parking brake warning lamp switch

Plug this pink wire lead into the dash/main harness assembly (510269, bag G) as shown on the dash/main harness instructions.

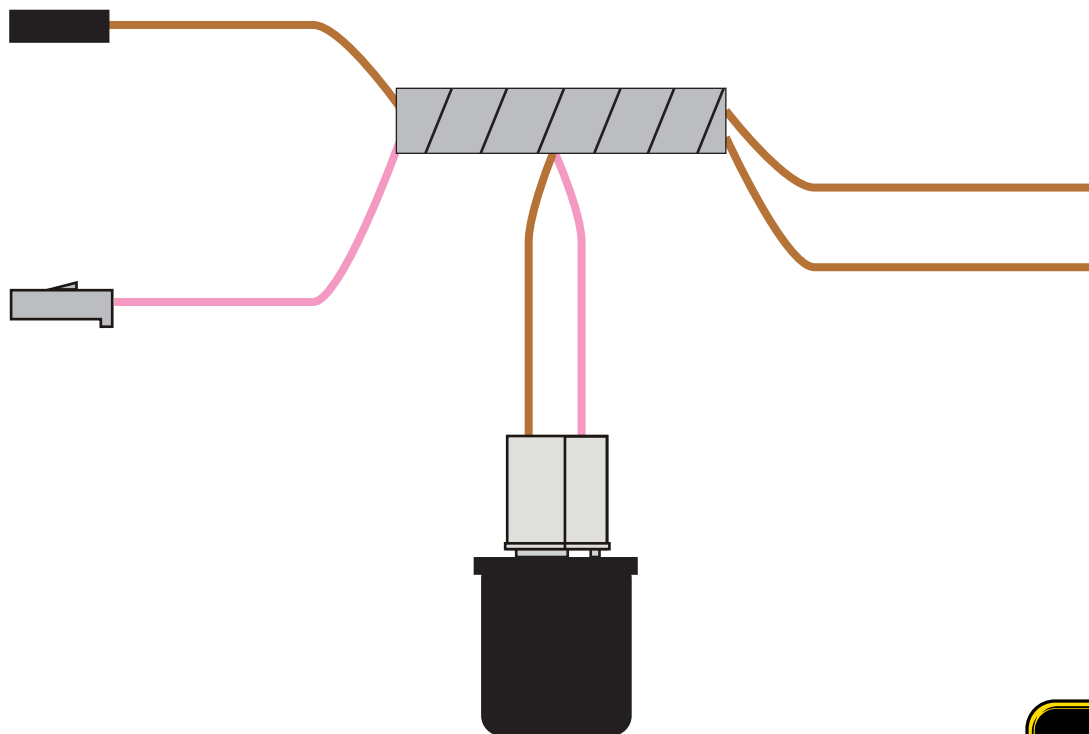

92970099

Splice these 2 leads to your stock original parking brake warning lamp socket assembly

NOTE: Please be aware that you will need to have a correct working parking brake warning lamp switch assembly and correct original dash lamp socket assembly for this optional kit to work as these parts are not available in the aftermarket and are **NOT INCLUDED** with this kit.

1. Splice either of the two tan leads from above right onto your existing stock parking brake warning lamp socket assembly. It does not matter which wires that you splice together as they are simply “pass thru” wires and no indexing is required at this lamp socket.
2. Plug the tan lead with the rubber boot from above left onto the male “bullet” terminal located on the original parking brake warning lamp switch assembly.
3. Plug the pink lead with the black plastic connector on it from above left into the dash/main harness (510269, bag G) at the location that is shown on the dash/main instruction set.



**American
Autowire**

www.americanautowire.com 856-933-0801

