

COURTESY AND DOME LIGHT CONNECTION KIT

UNDER DASH COURTESY EXTENSIONS **A**

ORANGE 12V Courtesy power
 WHITE Courtesy ground

Connect under dash courtesy extensions **A** on both the driver and passenger sides of the main dash harness. Run the white courtesy ground through the supplied grommet to the door jamb switch. If the door jamb switch uses a blade type terminal rather than the attached bullet, cut the bullet off and install the supplied female blade terminal **B**.


to LH door jamb switch
 (a female terminal for the stock driver side jamb switch is included loose piece in this kit.)

DOME LIGHT EXTENSION **C**

ORANGE 12V Courtesy power
 WHITE Courtesy ground

If your truck is equipped with dome lights connect dome light extension **C** in between the dash harness and the courtesy extension **A** on the drivers side. Route the orange and white wires up the windshield pillar and along roof to the dome light. Cut the orange and white wires to length. (**Note:** If your truck is equipped with two dome lights, double the cut off portion of wire in the front set of terminals **D**, route to rear dome, cut to length and install a second set of terminals **D**.) For front dome only, install either bulb terminal **D** and plug into original dome light housing or install terminal **E** and plug into lamp socket **F** depending on what type of dome light your truck is equipped with.

to RH door jamb switch
 (this terminal is correct for an original passenger side door jamb switch.)

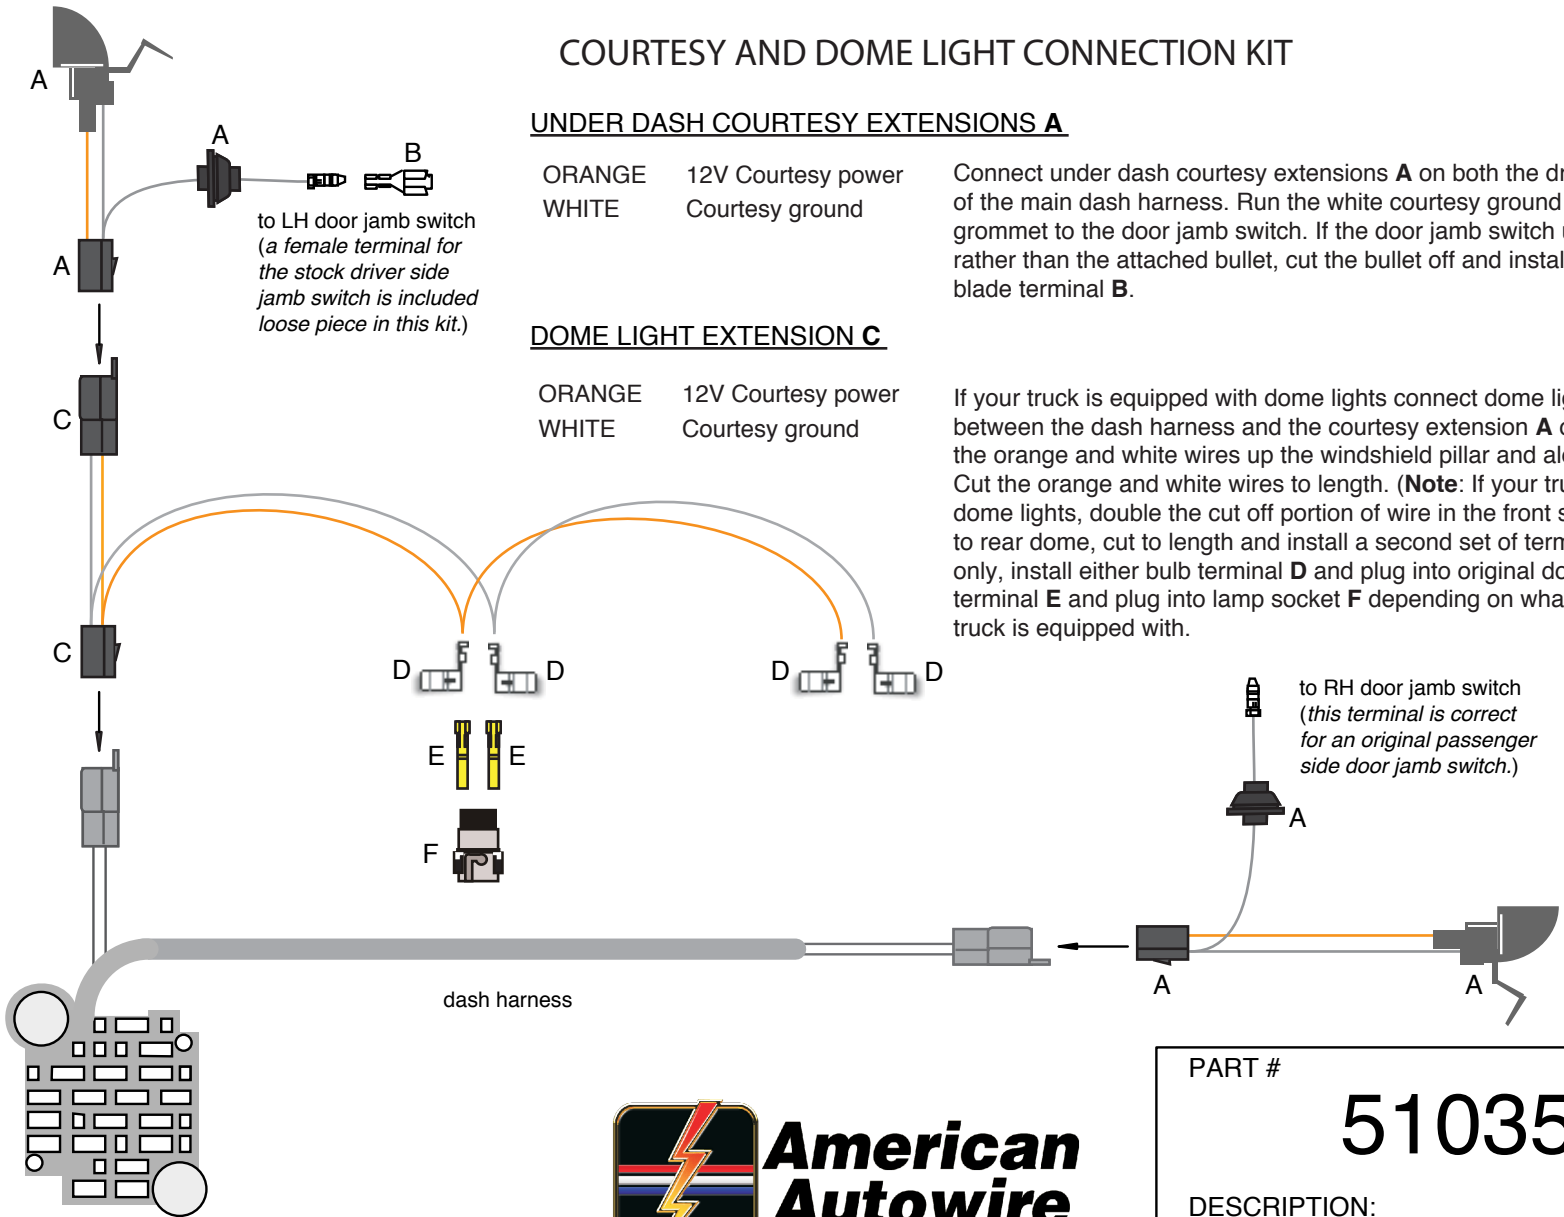

**American
 Autowire**

www.americanautowire.com 856-933-0801

PART #

510354

N

DESCRIPTION:

Courtesy Lamp Kit

92970203 instruction sheet

Rev 0.0 12/6/12 KW