

# 1960-62 Ford Galaxie & 1961-62 Mercury Full-size Fuse Block Mounting Instructions

Remove your original Instrument Panel Harness and Fuse Block from your under dash area.

For the **1960-1962 vehicles**, obtain the two grommet **F's** from the **510596 Parts Kit** and install the two **grommet F's** in each of the two rectangular holes in the Firewall. Pass all of the wiring from **Circuit Branch #1** through the **lower grommet** and all of the wiring from **Circuit Branch #2** through the **upper grommet**. You may want to remove the zip ties from the wiring, to help the wiring pass through the grommets easier.

Carefully pull all of the wiring from Circuit Branches #1 and #2 through the grommets in the Firewall, leaving enough wire length inside the passenger compartment, to mount the Fuse Block (see photograph).

Be sure to check for clearances to any accessories that you might be adding. Pay particular attention to the Clutch and Brake Pedal Assembly when routing your Dash Harness.

There are (4) mounting holes, on the mounting tabs of the fuse block case: (3) on the upper tab and (1) on the lower tab. Using the fuse block as a template (be sure to locate the fuse block, so that you will be able to access the fuses, after it is mounted) mark and drill (3) new 1/8" (.125) dia holes, in your Firewall. You do not need to use the center mounting hole, in the upper tab. (3) new attaching screws have been provided, for you to mount the fuse block vertically, to the Firewall; they can be found in the **92971137 Loose Piece Kit, for the 510592 Dash Harness**. You will need to cut back some of the sound deadener and carpet, to mount the fuse block. If the fresh air vent interferes with the installation of the Fuse Block, remove it and reinstall it, after the Fuse Block is mounted in position.

Be sure to attach the Fuse Block Cover, to the Fuse Block. The round end of the Fuse Block Cover Tether, will fit in an opening in the Fuse Block, near the fuses. **Note: the Fuse Block Cover Label, has all of the fuses identified and their function.**

After all of the wires are routed and the grommets are seated, apply silicone sealer to the grommets in the Firewall, to make a weather tight seal.



Parking Brake pedal

Photograph, is of a  
1960-62 Ford Galaxie

**As Viewed From  
Under The Dash**



www.americanautowire.com 856-933-0801

**92971155**

92971155 Rev 0.0 3/31/2015

# 1963-64 Ford Galaxie & 1963-64 Mercury Full-size Fuse Block Mounting Instructions

Remove your original Instrument Panel Harness and Fuse Block from your under dash area.

For the **1960-1962 vehicles**, obtain the two grommet F's from the **510596 Parts Kit** and install the two **grommet F's** in each of the two rectangular holes in the Firewall. Pass all of the wiring from **Circuit Branch #1** through the **lower grommet** and all of the wiring from **Circuit Branch #2** through the **upper grommet**. You may want to remove the zip ties from the wiring, to help the wiring pass through the grommets easier.


Carefully pull all of the wiring from Circuit Branches #1 and #2 through the grommets in the Firewall, leaving enough wire length inside the passenger compartment, to mount the Fuse Block (see photograph).

Be sure to check for clearances to any accessories that you might be adding. Pay particular attention to the Clutch and Brake Pedal Assembly when routing your Dash Harness.

There are (4) mounting holes, on the mounting tabs of the fuse block case: (3) on the upper tab and (1) on the lower tab. Using the fuse block as a template (be sure to locate the fuse block, so that you will be able to access the fuses, after it is mounted) mark and drill (3) new 1/8" (.125) dia holes, in your Firewall. You do not need to use the center mounting hole, in the upper tab. (3) new attaching screws have been provided, for you to mount the Fuse Block horizontally, to the Firewall; they can be found in the **92971137 Loose Piece Kit, for the 510592 Dash Harness**. You may need to cut back some of the sound deadener and carpet, to mount the fuse block. If the fresh air vent interferes with the installation of the Fuse Block, remove it and reinstall it, after the Fuse Block is mounted in position.

Be sure to attach the Fuse Block Cover, to the Fuse Block. The round end of the Fuse Block Cover Tether, will fit in an opening in the Fuse Block, near the fuses. **Note: the Fuse Block Cover Label, has all of the fuses identified and their function.**

After all of the wires are routed and the grommets are seated, apply silicone sealer to the grommets in the Firewall, to make a weather tight seal.

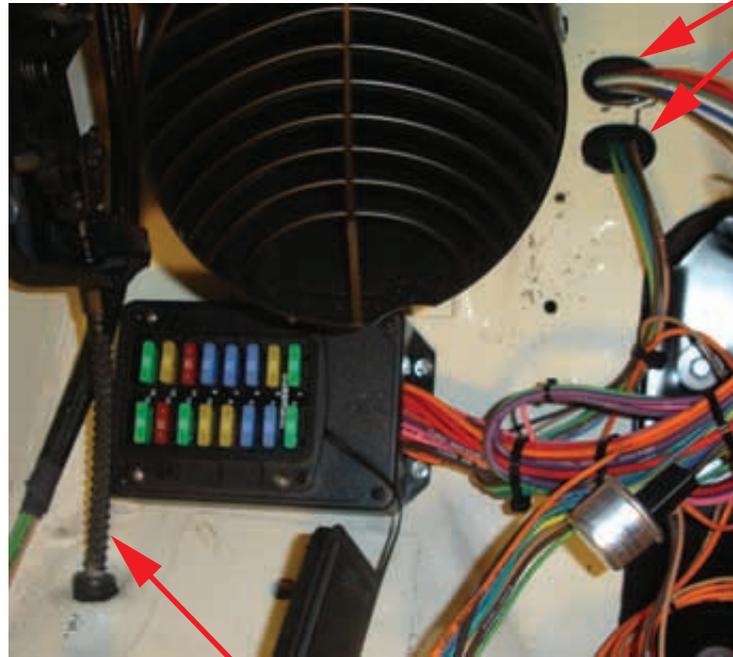

Grommet F, in upper rectangular, Firewall holes

Photograph, is of a 1964 Ford Galaxie

Parking Brake cable

**As Viewed From Under The Dash**



www.americanautowire.com 856-933-0801

**92971155**

92971155 Rev 0.0 3/31/2015