


92971549


Plug this connector into the 6-way Floor Console connector, on your Dash Harness. See Circuit Node #7, on pg 4 of your Dash instruction dwg 92971527.

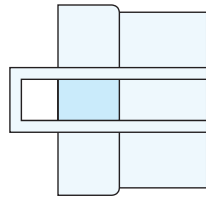

**NOTES:**



1. Bulbs #90 and #1895 are required for this kit, but are **NOT INCLUDED** with this kit; however they are available in any auto parts store.

2. If you need to replace your **original** A/T Back-up Switch pigtail 2-way connector, the replacement 2-way connector and terminals are provided with this kit.

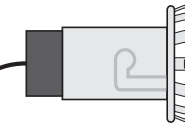


Plug these sockets, into your Floor Console courtesy light housings

bulb #90 is required - **NOT INCLUDED**

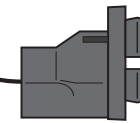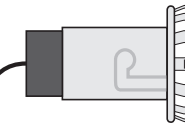

Plug this socket, into your A/T "PRNDL" light housing

bulb #1895 is required - **NOT INCLUDED**



Plug this connector, onto your A/T Back-up Switch (1968)



**American  
Autowire**

www.americanautowire.com 856-933-0801

