



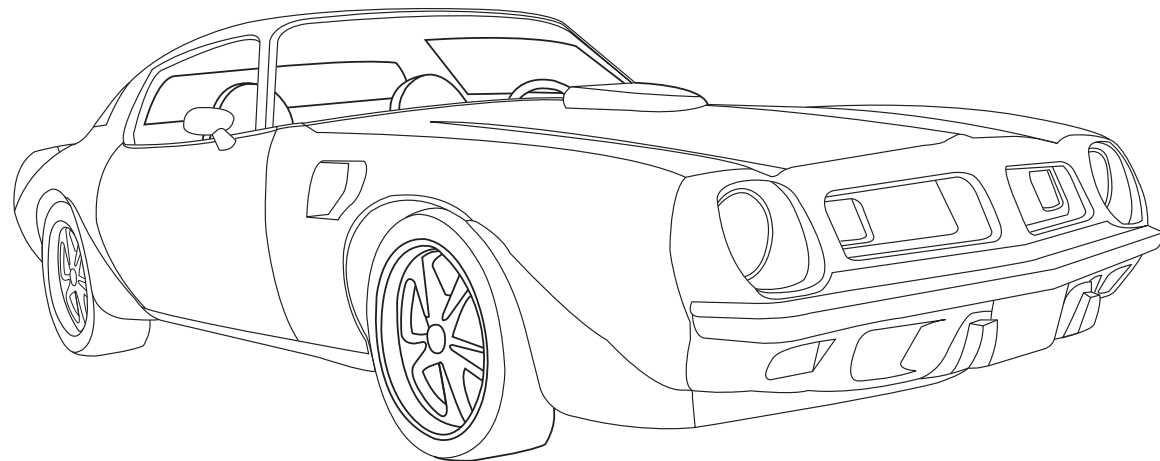

# American Autowire


1. This kit is designed to work with our **510683** and **510689** Firebird Classic Update Kits. It is **NOT** intended to be used by itself or with any other aftermarket electrical system.

2. This kit requires that you use the factory rear window heater, heater relay / timer, and switch.

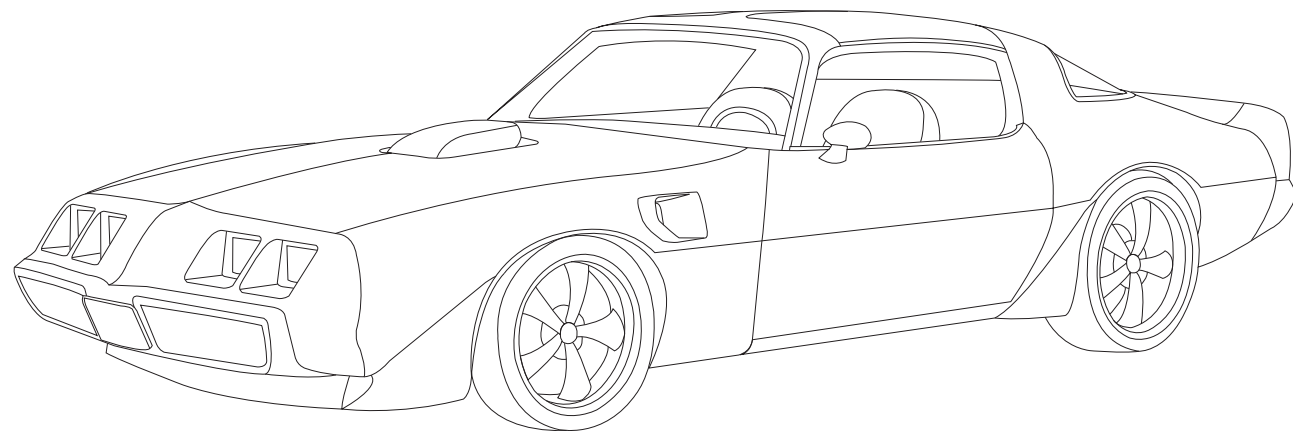


## Kit Contents

A



B




C



D




E



F



## Main Harness

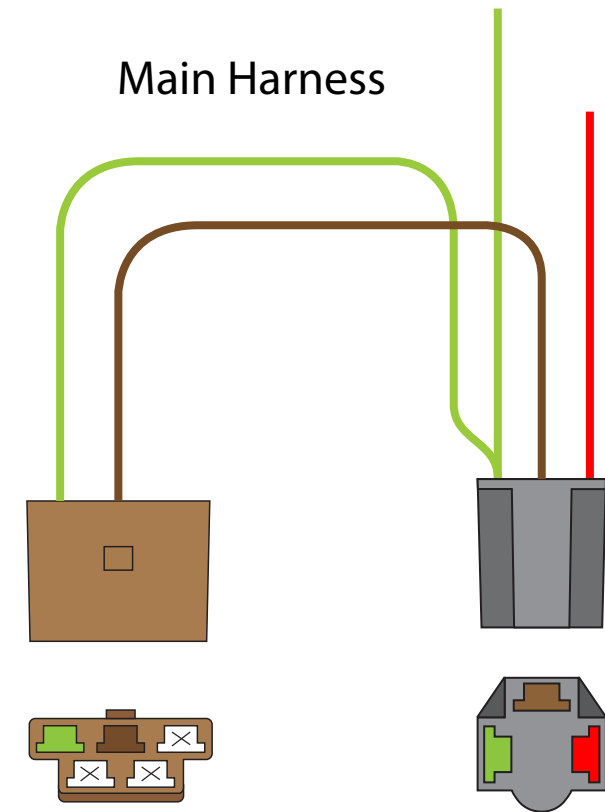

# 1974-80 Firebird Classic Update Series Heated Rear Window Kit

## 510701

© COPYRIGHT 2004 American Autowire / Factory-Fit  
Used with express permission of  
American Autowire / Factory-Fit

www.americanautowire.com 856-933-0801

Heated Rear Window  
Kit

1974-80 Firebird  
Classic Update Series


**510701**

**92971867**

Rev 0.0 6/13/2017 KW

# Heated rear window harness installation instructions:



## 1974-76

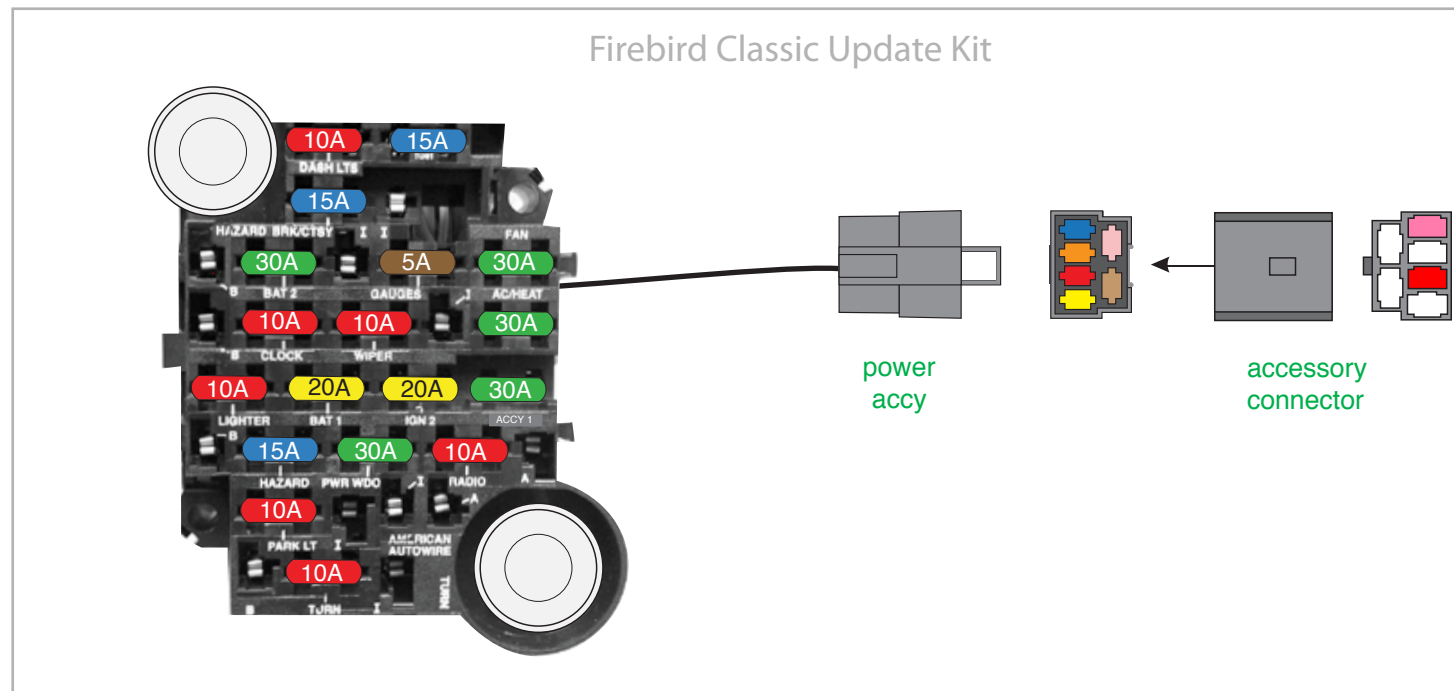

Use the accessory connector supplied with your Classic Update Kit. Plug into cavity indicated in red for battery power, and pink for ignition trigger.

If you have already used the red cavity for our 510703 or 510704 Power Lock kits, double the red wires into terminal B.


To a good chassis ground.

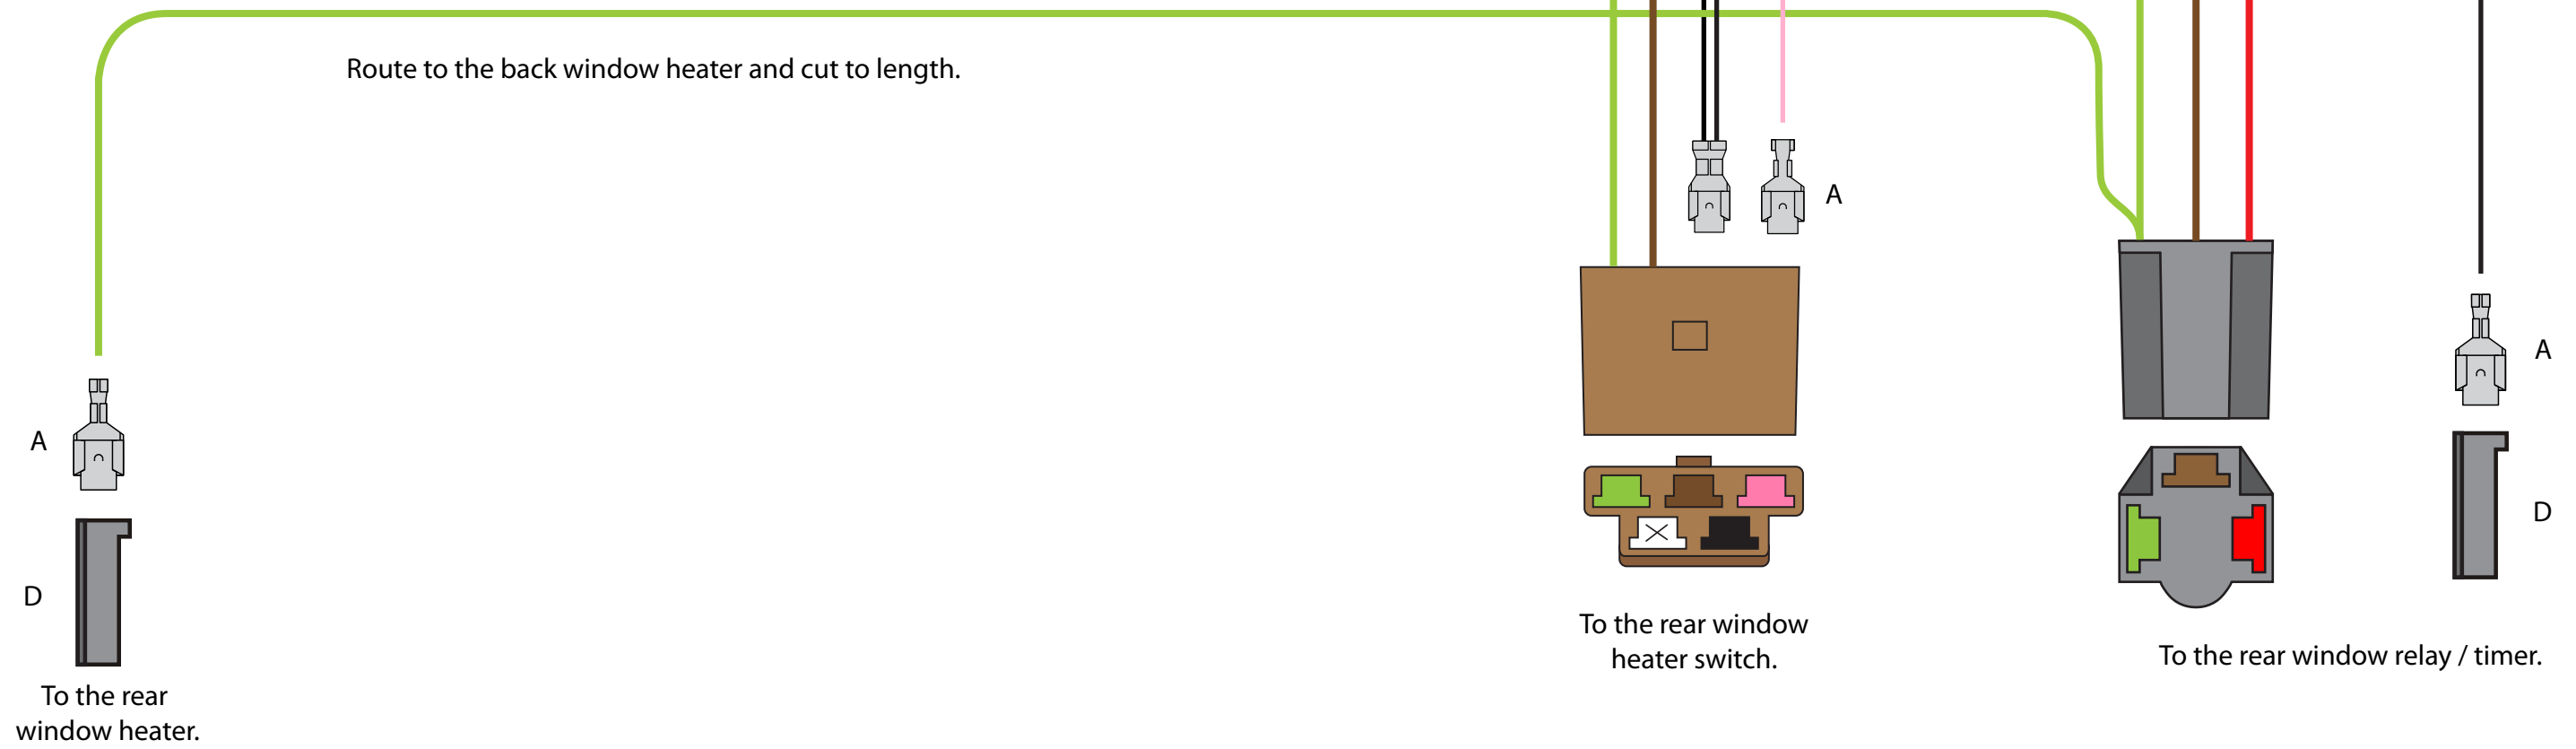


# Heated rear window harness installation instructions:

1977-79

Firebird Classic Update Kit

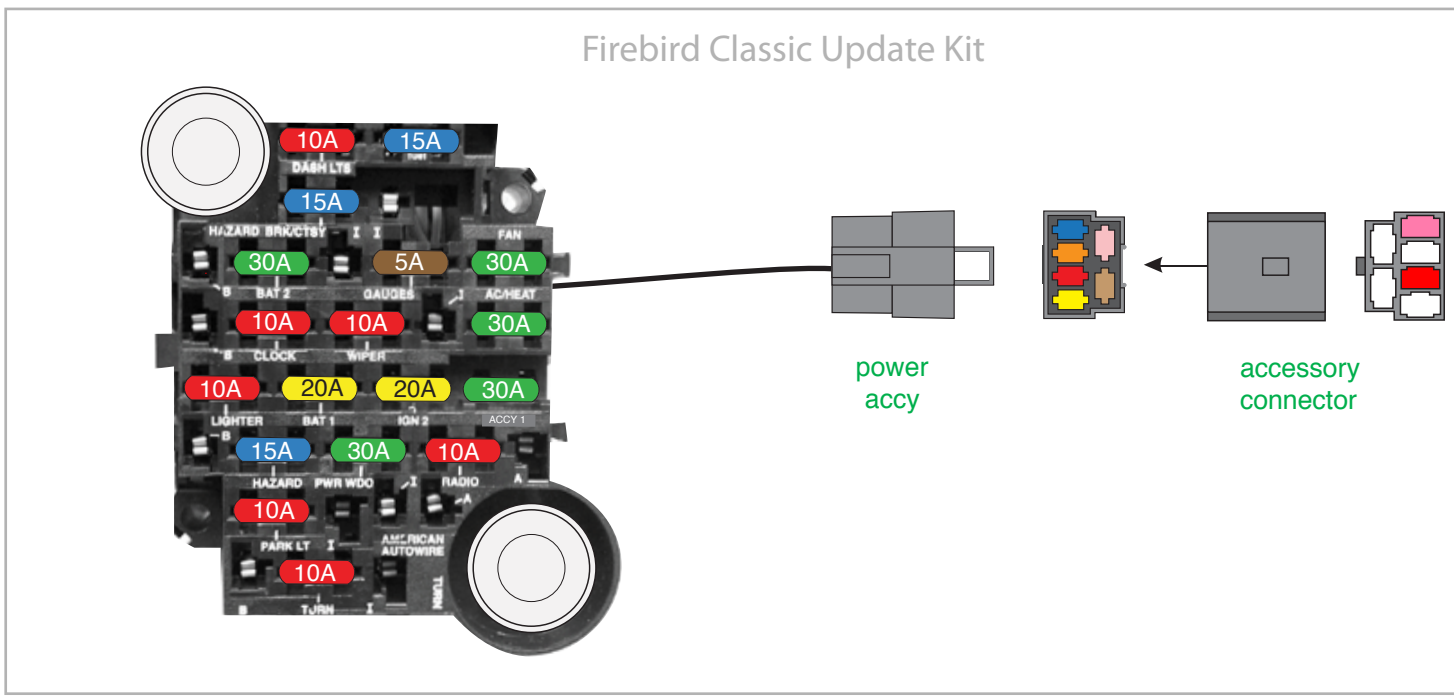

Use the accessory connector supplied with your Classic Update Kit. Plug into cavity indicated in red for battery power, and pink for ignition trigger.


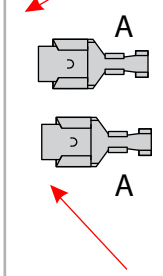


If you have already used the red cavity for our 510703 or 510704 Power Lock kits, double the red wires into terminal B.


To a good chassis ground.



Route to the back window heater and cut to length.

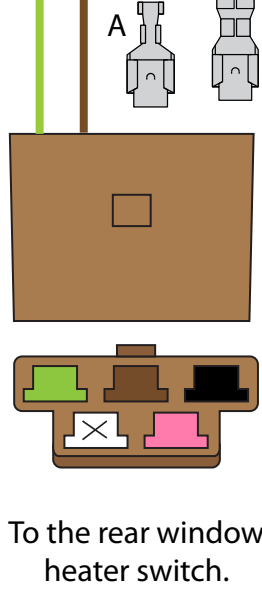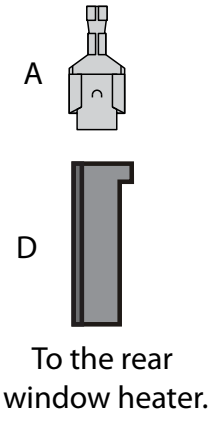

To the rear window heater switch.

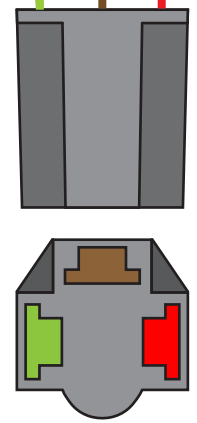


To the rear window relay / timer.


# Heated rear window harness installation instructions:

1980

Firebird Classic Update Kit

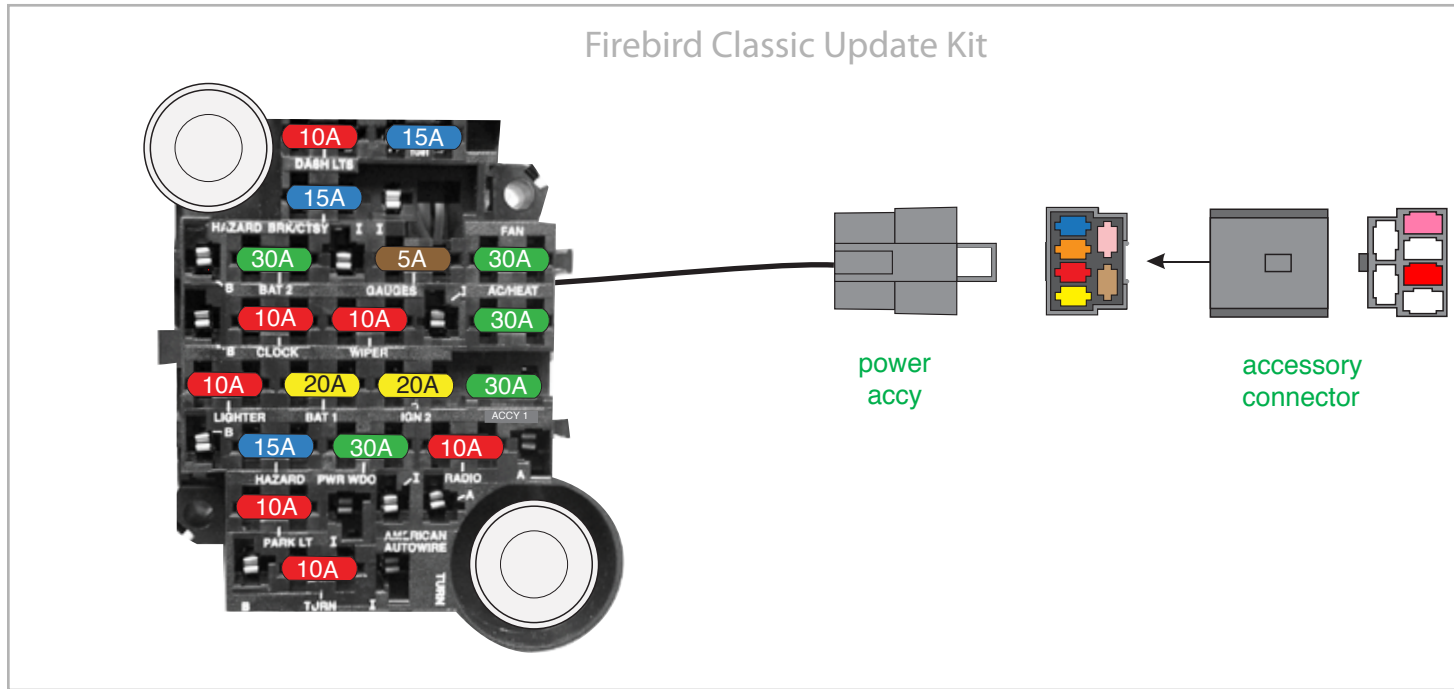

Use the accessory connector supplied with your Classic Update Kit. Plug into cavity indicated in red for battery power, and pink for ignition trigger.

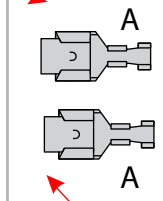


If you have already used the red cavity for our 510703 or 510704 Power Lock kits, double the red wires into terminal B.

To a good chassis ground.



Route to the back window heater and cut to length.

Cut pink wire to length, double in the terminal B. Route cut off portion to connector C and apply terminal A.

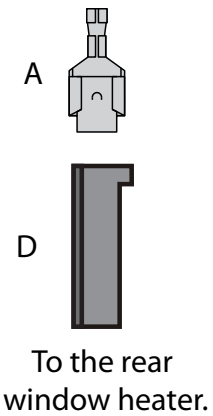

To the rear window heater.

To the rear window heater switch.

To the rear window relay / timer.